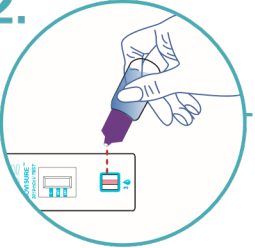
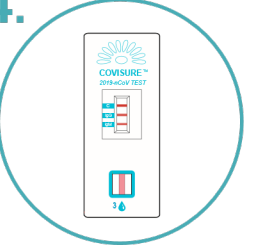


Finger Stick/Whole Blood Sampling Procedure

- 

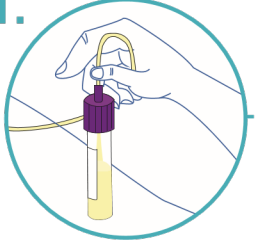
Collect 20ul whole blood and add sample to the "sample well" on the test.
- 

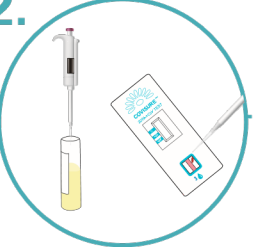
Place 2-3 drops of buffer into the "sample well."
- 

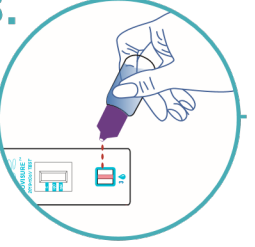
Wait 15 minutes.
- 

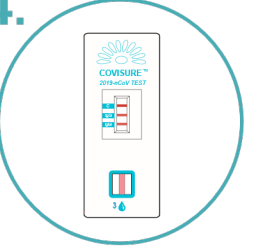
Read results.

Serum/Plasma Testing Procedure

- 

Collect 10ul of serum/plasma.
- 

Add serum/plasma sample to "sample well."
- 

Place 2-3 drops of buffer in "sample well."
- 

Read results after 15 minutes.

Results

